


Board Layout Driver

 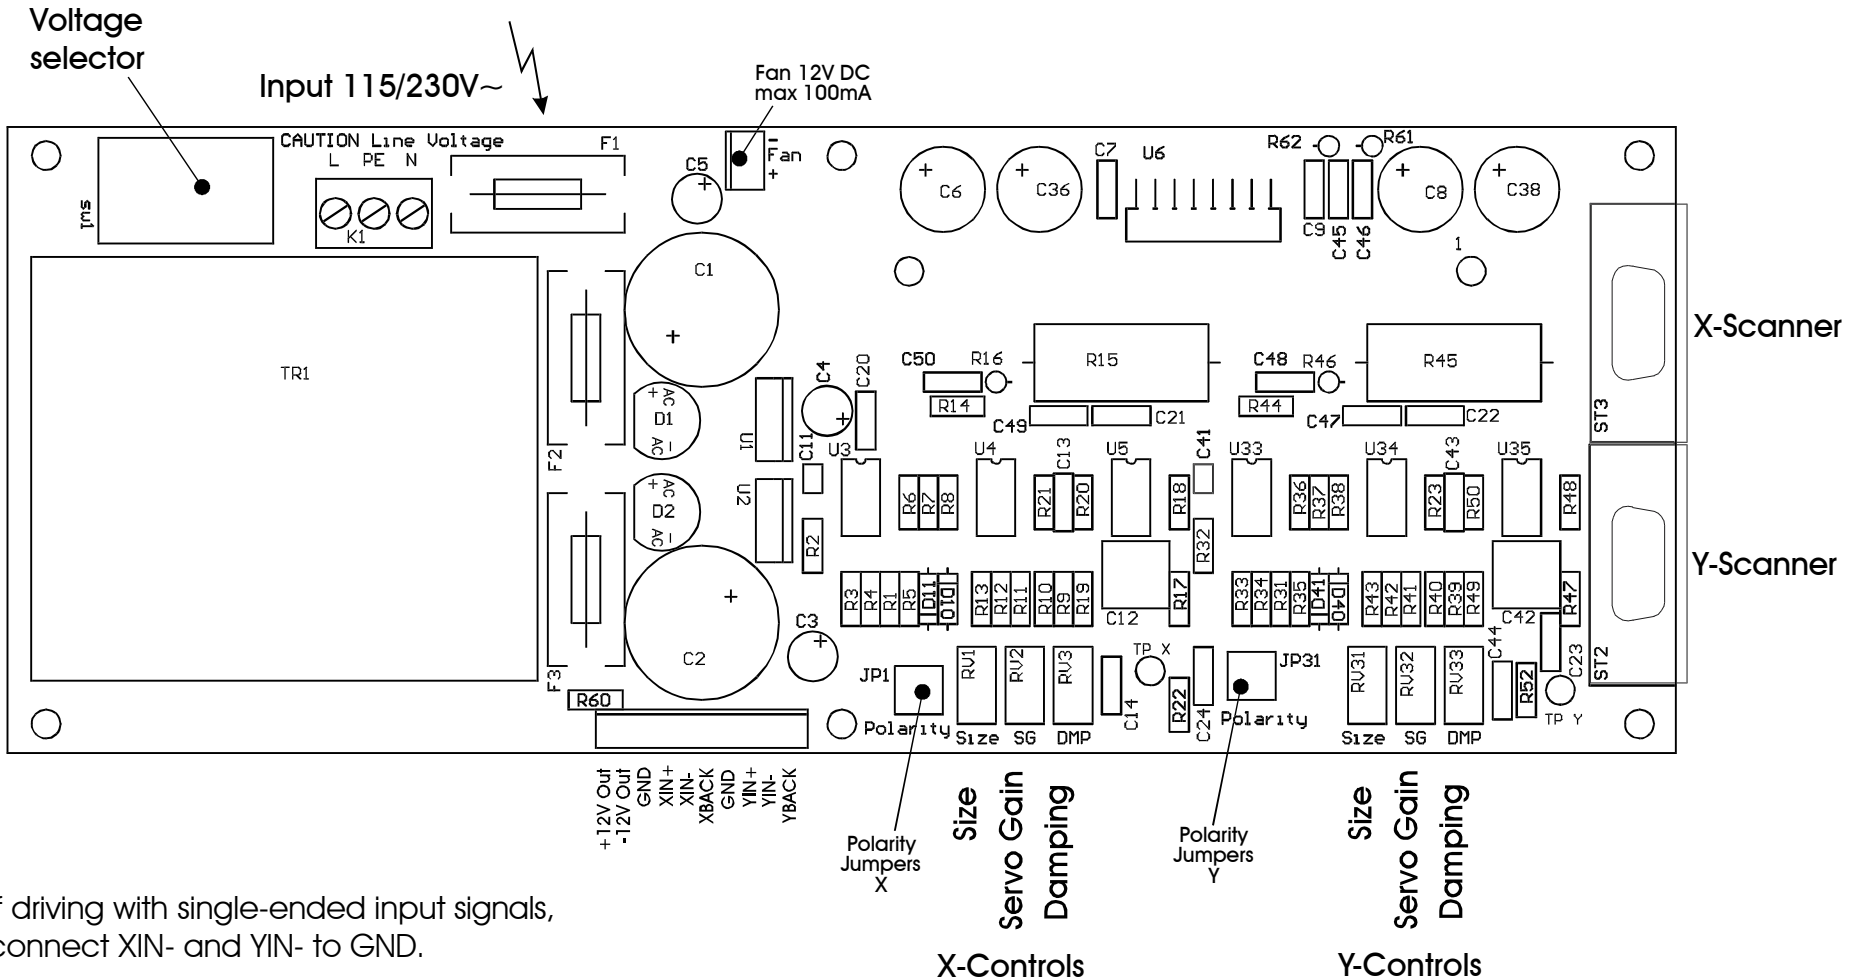


If driving with single-ended input signals, connect XIN- and YIN- to GND.

+12V, -12V, XBACK and YBACK for special applications. Leave unconnected!
For measurements, use TPX and TPY.

Keep +12V and -12V free from noise influence!

Polarity Jumpers:



Clockwise tuning of controls increases SIZE, Servo Gain or Damping